




Northbox™ Insulator Assembly



C-shape



- ① Insulator Part #1
- ② Insulator Part #2
- ③ Corrugated boxes

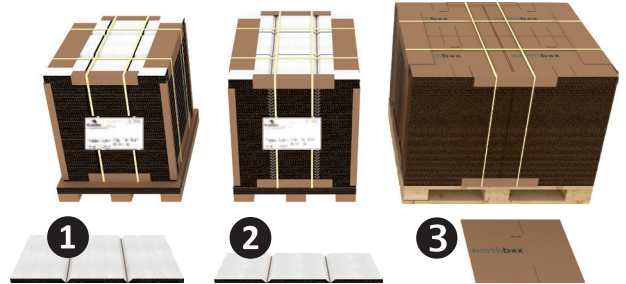

Steps

<p>Take the larger panel (panel 1) from the pallet marked #1.</p>	<p>With the silver side facing up, lie the first third of the panel flat at the bottom of the box.</p>	<p>Then, take the smaller panel (panel 2) from the pallet marked #2.</p>
<p>Create a C shape and slide it into the box, lining the three unlined sides.</p>	<p>Make sure the panels are properly placed, flush with the sides of the box.</p>	<p>Lastly, make sure the box flaps close completely before taping.</p>

ASSISTANCE

1-844-349-5657 (toll-free)

northb*x
FRESH AT YOUR DOOR